



07877743921
sales@x-mods.co.uk
www.x-mods.co.uk
xmodscontrollers
X_MODS_LTD

36 MODE RAPIDFIRE INSTRUCTIONS - THE LEGACY MOD

TURNING THE MOD ON AND OFF

To turn the mod on or off you need to tap the SYNC button, the led will flash 4 times to indicate that rapid fire is on or will go out for a brief second before illuminating and staying lit to show rapidfire is now switched off.

****After pressing the sync button Please allow up to 2 seconds before pressing any other button on the controller this will stop any accidental re-syncing of the controller****

CHANGING MODES

You change modes with the dpad and sync button.

If you hold left on the dpad and tap sync, you will increase the mode by 1 with each press of the sync button. You always start from mode 1 doing it this way.

If you hold up on the dpad and tap sync, you will increase the mode you are in, by 1. If in mode 10, you would then be in mode 11.

Holding down on the dpad and tapping sync will decrease the mode you are in by 1, if in mode 10, you would then be in mode 9.

"You must wait for the led to stop flashing before pressing any other button, this will stop any accidental re-syncing of the controller"

NEW MODE FLASH

For modes above 10 the controller led will flash once slowly to represent 10 then fast for 1's E.g. for mode 15 the Led will flash slowly once = 10 then fast 5 times = 15.

ENTERING A "SUB MODE"

To enter a sub mode you must first choose the main mode you would like to enter, if you look at the mode list the main modes are on the left, sub modes are on the right. So, enter a mode from 1-18 on the left side, then double tap the sync button to enter its "sub mode". You will know you have entered the sub mode as the player LED will flash 3 times.

EXTRA FEATURES

You can enable/disable extra features on many of the main modes, to do this:

JUMP SHOT on/off - Hold in A and press the sync button

DROP SHOT on/off - Hold in B and press the sync button

AUTO ADS on/off - Hold in Y and press the sync button

AUTO RUN on/off - Hold in LS and press the sync button

ALL OFF - Hold in X and press the sync button

"Please check the mode list to see which modes accept the enabled features"

RESETTING A MODE BACK TO DEFAULT SPEED (7 S.P.S)

To reset a mode back to the default speed first enter programming (hold right on the dpad and tap sync) then hold down on the dpad and press sync to reset the modes speed to default. The player led will flash twice slowly then re flash the mode number.

MOD PAUSE

Double tap left on the dpad to pause the mod, the led will turn off to indicate the mod is paused.

To un-pause, double tap left on the dpad. The led will then turn back on and be just as you left it.

MODE LED PLAYBACK

To see which mode you are in, hold RS and tap the sync button, the LED will then flash the mode number.

MODES EXPLAINED

Right Trigger Rapid Fire

RT rapid fire only (rapid fire turns semi automatic weapons into full auto's)

Mimic Akimbo

While pressing only RT both RT and LT will rapid fire.

Normal Akimbo

Rapid fire on both triggers independently.

AUTO ADS

Aim and shoot while only pressing the right trigger.

Quick Scope

Quickly Press and release the left trigger (LT) and the player will scope and shoot at the perfect timing.

Quick Scope Sniper Breath

Same as above but the player will also take a breath.

Quick Scope Double Shot

Same as quick scope but the player fires 2 shots (3 with some rifles, doesn't work with bolt action weapons).

3 or 5 Round Burst/Rapid fire

While aiming down sights each press of the right trigger will burst fire, not aiming will give you rapid fire.

3 or 5 Round Burst for Auto's

This mode turns fully automatic weapons into burst weapons.

Autorun

Run without having to keep the left thumbstick pressed. We recommend using, marathon and ready up with the auto run modes.

Drop Shot

Hold (RT) to make your player go prone while shooting, once you start to go prone LT can be pressed to aim in.

Jump Shot

Pressing (RT) will make your player jump while shooting, once you start to jump LT can be pressed to aim in.

Jump Shot & Drop Shot

Pressing (RT) will make your player jump and then go prone while shooting, once you start to jump LT can be pressed to aim in.

Aim Kneel Reset

Aiming in with LT will drop the player to his knee, when LT is released the player will stand back up.

Auto Aim

With LT pressed the mod will automatically aim on to the nearest target to your gun crosshairs.

(Offline only, unless aim assist is built into the game i.e. GTA online)

Black Ops Turbo Melee

Faster melee, must have semtex equipped.

Black Ops Snaking

Allows you to sprint while in the prone position, hold in LS and press B to turn on/off.

Battlefield Autospot

RB will be automatically pressed to spot when aimed in.

Halo Doubleshot

Tapping the trigger will fire 5 bullets press and hold will fire 5 bullets then burst 3 bullets.

Perfect Clutch for racing games

Press X and A is pressed - Press B and A is pressed.

World at War Mode

Call of Duty - World at War requires rapidfire on a different frequency, otherwise players get mod blocked. This mode allows you to use rapidfire without the chance of getting blocked.

Gears of War Active Reload

Pre-set timed for the lancer but can be changed for other guns by changing the timing which is set in S.P.S and can be changed by entering programming, (the higher the s.p.s the faster)

"When using the shotgun wait until the animation has finished before pressing RB to reload"

GoW RELOAD TIMES:

Lancer = 14 s.p.s -- Shotgun = 19 s.p.s -- Pistol = 11 s.p.s

LT Cancellation

Jumpshot and Dropshot both have LT cancellation, if you pull LT before RT, the command will be cancelled.

MODE LIST

MAIN MODES	
1	RT Rapidfire Jumpshot, Dropshot, Autorun, ADS
2	Akimbo Mimic Rapidfire Jumpshot, Dropshot, Autorun, ADS
3	Jitter v1 (XYY) Jumpshot, Dropshot, Autorun, ADS
4	Black Ops 3 Jump Hover with Rapidfire
5	3 Shot Burst for Automatic Weapons Jumpshot, Dropshot, Autorun, ADS
6	Aim Kneel Reset with Rapidfire
7	Quickscope
8	Quickscope Doubleshot
9	3 Round Burst with Rapidfire Jumpshot, Dropshot, Autorun, ADS
10	5 Round Burst with Rapidfire Jumpshot, Dropshot, Autorun, ADS
11	Turbo melee with Rapidfire Jumpshot, Dropshot, Autorun, ADS
12	Black Ops Snaking with Rapidfire
13	Auto Reload with Rapidfire Jumpshot, Dropshot, Autorun, ADS
14	Battlefield Autospot with Rapidfire Jumpshot, Dropshot, Autorun, ADS
15	Halo Double Shot
16	GoW Fast Reload with Rapidfire
17	World at War Rapidfire Mode Jumpshot, Dropshot, Autorun, ADS
18	Autoaim with Rapidfire Jumpshot, Dropshot, Autorun, ADS

SUB MODES	
1a	No Rapidfire Jumpshot, Dropshot, Autorun, ADS
2a	Normal Akimbo Rapidfire (both triggers) Jumpshot, Dropshot, Autorun, ADS
3a	Jitter v2 (YY) Jumpshot, Dropshot, Autorun, ADS
4a	Black Ops 3 Jump Hover no Rapidfire
5a	5 Shot Burst for Automatic Weapons Jumpshot, Dropshot, Autorun, ADS
6a	Aim Kneel Reset no Rapidfire
7a	Quickscope Sniperbreath
8a	Quickscope Doubleshot Sniperbreath
9a	3 Round Burst no Rapidfire Jumpshot, Dropshot, Autorun, ADS
10a	5 Round Burst no Rapidfire Jumpshot, Dropshot, Autorun, ADS
11a	Turbo melee no Rapidfire Jumpshot, Dropshot, Autorun, ADS
12a	Black Ops Snaking no Rapidfire
13a	Auto Reload no Rapidfire Jumpshot, Dropshot, Autorun, ADS
14a	Battlefield Autospot no Rapidfire Jumpshot, Dropshot, Autorun, ADS
15a	Racing Games Perfect Clutch
16a	GoW Fast Reload no Rapidfire
17a	World at War no Rapidfire Jumpshot, Dropshot, Autorun, ADS
18a	Autoaim no Rapidfire Jumpshot, Dropshot, Autorun, ADS

ENABLE/DISABLE JUMPSHOT - DROPSHOT - AUTORUN AND ADS IN ALMOST ALL MODES!!!

PROGRAMMING

PROGRAMMING/CHANGING THE MODE SPEED IN S.P.S (shot per second)

- To enter programming press and hold right on the dpad and tap the sync button, then release the dpad
- The player led will now start to flash, each flash represents the speed in s.p.s. Quick flashes are decimals (0.1 sps)
- To change the speed you use the dpad.
- Each time the speed is changed the led will flash the new set s.p.s.
- To increase the speed by +1 s.p.s press up on the dpad.
- To decrease the speed by -1 s.p.s press down on the dpad.
- To increase by 0.1 s.p.s press right on the dpad, at 0.9 the next press it will go back to .0.
- To decrease by 0.1 s.p.s press left on the dpad.
- To exit programming, tap sync once.

S.P.S SET TOO HIGH

If you find that a gun stutters while shooting or the burst modes shoot fewer bullets than they should, the s.p.s is set too high for the game/gun to recognise. To fix this simply lower the s.p.s until the correct bullets are fired or the gun stops stuttering.

PROGRAMMING THE QUICK SCOPE TIMING/DELAY BEFORE SHOOTING

- First make sure you are in the quick scope mode. (Mode 7)
- Enter the programming mode. (dpad right + SYNC)
- The player led will now start to flash the speed in s.p.s, then flash faster for decimal (0.1s.p.s)
- To change the speed you use the dpad and the sync button
- Each time the speed is changed the led's will flash the new s.p.s.
- **dpad up +1s.p.s / dpad down -1s.p.s / dpad right +0.1s.p.s / dpad left -0.1sps.**
- Exit programming tap SYNC.

****NOTE IN QUICK SCOPE MODE THE LOWER THE S.P.S THE FASTER THE QUICK SCOPE****

FASTEST quick scope speed 1 s.p.s

SLOWEST quick scope speed 6 s.p.s

For beginners start a 6 s.p.s then adjust accordingly.

****In the quick scope mode taking your left thumb off the left analogue stick before pressing LT will increase the accuracy of the shot****

If you have any problems what so ever, please don't hesitate to contact us. Our contact details are on the bottom of this page as you will see.

If you're happy with your controller and the service we have provided **please remember to leave a 5 star rating and positive feedback**, our business relies heavily on ratings so each one is greatly appreciated.

Are you a member of Facebook? We started a Facebook group a while back, were slowly building up a member base on there, why don't you head along and Like our page. All the latest updates, news and new products will also be listed on there. So if you'd like to support us and stay up to date, come and say hi, you can find us at www.facebook.com/xmodscontrollers

You can also find us on Instagram: [X_MODS_LTD](https://www.instagram.com/X_MODS_LTD)

Email: aftercare@x-mods.co.uk

Website: www.x-mods.co.uk

Phone: 07877743921

[facebook.com/xmodscontrollers](https://www.facebook.com/xmodscontrollers)